 



X8 unit RS232 side

 


Serial

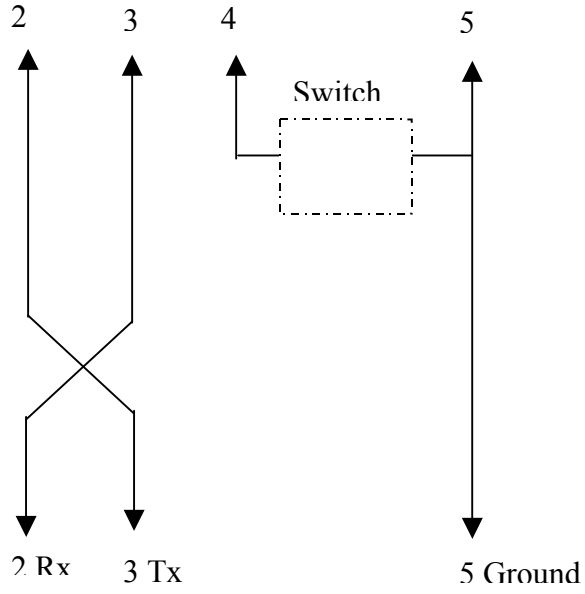

Firmware download:
Switch = ON

Regular data transmission:
Switch = OFF



Serial

PC side