

Operational Manual of IntelliTrac Wireless Infrared Dialer


I. *Accessory*

The Wireless Infrared Dialer consists of the following items:

-Wireless Keypad



-Receiver

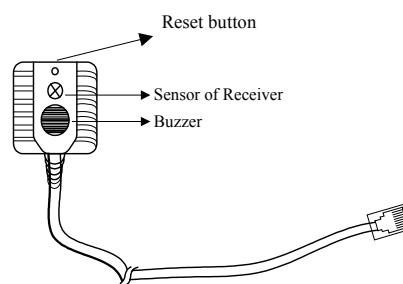


II. *Installation*

Connects the Receiver to the “Handset” port on Audio Box

Note:

The keypad should be aimed to the sensor of receiver.

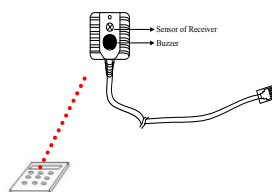

III. *Password setup*

The default password is “0000”. To reset password, please follow the steps below:

1. Type “***??? #” then press “SET” button. (??? represents the password which is given by users. The format must be four digits numbers).
2. Press and hold the “Reset button” of the receiver, at the meanwhile, press “END” to set the password and release the “Reset button” after a long beep. The password should be changed after a long beep.

IV. Power Management

Press any key on the Keypad and execute the function of the key. Once the idle time excess 30 seconds, the Keypad will enter into power-saving mode or press “END” button to turn the power off.

V. How to make a phone call


Key-in the number and click the “DIAL” key on the keypad. One should be able to hear two short “beep” sounds if Infrared Receiver senses the command from Keypad.

VI. How to end the phone call

Click “END” on the Keypad in order to hand up the phone call.

VII. How to pre-set the quick dialing number

The devise supports 3 sets of quick dialing function:

1. Input the phone number as wishes
2. Click “SET” button on the Keypad once the number as correct.
3. Press and hold one of  until the selecting symbol has showed on the LCD display.

VIII. How to quick dial

Press and hold one of  until the entering number showed on the LCD display then the phone call has been made after two beep sounds.

IX. Tracking Function

Press and hold the “TRACK” key on the keypad for sending a real time tracking request message to the control center. The command will be made once the symbol showed on the LCD display with two beep sounds.

X. SOS Function

Press and hold the “SOS” key on the keypad for sending an emergency help message to the control center. The command will be made once the symbol showed on the LCD display with two beep sounds.