


# *IntelliTrac Model WB101*

## **Specification and Function of IntelliTrac Model WB101 Remote Control Emergency Button**

### **I . Specification:**

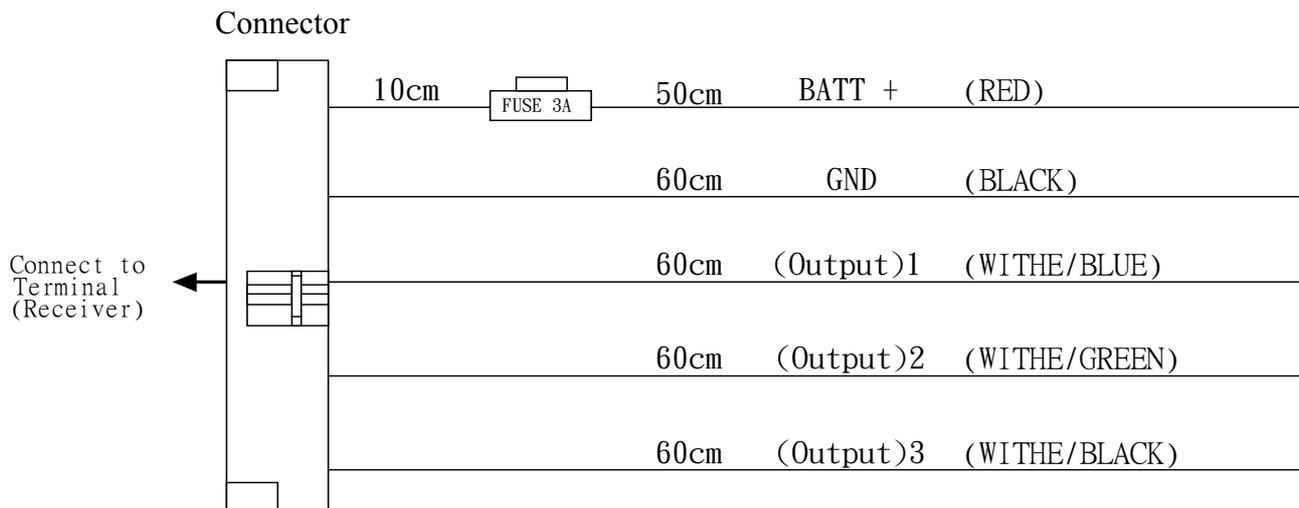

### **II . Functional of each Cable:**

BATT+(RED) red wire	—————>	+12 V Power
GND(BLACK) black wire	—————>	Grounding
(Output)1 (WHITE/BLUE)	—————>	Connect to Input 5 of X8 for negative trigger
(Output)2 (WHITE/PURPLE)	—————>	Connect to Input 6 of X8 for negative trigger
(Output)3 (WHITE/SILVER)	—————>	Connect to Input 7 of X8 for negative trigger

### **III . Peripherals of Remote Control Emergency Button:**

- 1.WB101 pc motherboard and plastic casing
- 2.WB101 5P cable/wire of motherboard
- 3.Two remote controls

#### **IV. Directions and Manual of model WB101:**

1. Press button I for trigger Input 5 of X8 to be “ON”

2. Press button II for trigger Input 5 of X8 to be “OFF”

3. Press button III for trigger Input 6 of X8 to be “ON”;

Input 6 keeps the “ON” status while the button is pressed; afterwards, the input status switch “OFF” when button is released.

4. Press button IV for trigger the Input 7 of X8 to be “ON”.

Input 7 keeps the “ON” status while the button is pressed; afterwards, the input status becomes “OFF” when button is released.

#### **Example:**

1. Button I and Button II can be used for controlling ON/OFF for Input 5

The directions as the following:

Setup for the report functions of X8 to be:

- Input 5 (ON), Output 8 (ON)

- Input 5 (OFF), Output 8 (OFF)

(Output 8 controls immobilizer only)

In this way, when Button I is pressed, then Input 5 of X8 is “ON” to control the Output 8 of X8 to be “ON” and to active immobilizer function.

When Button II is pressed, Input 5 of X8 is “OFF” to control Output 8 of X8 to be “OFF” in order to inactive immobilizer.

For further information regards installation of immobilizer, please lookup

“IntelliTrac X Series Hardware Installation Guide.”

As following the guidelines and directions above, one shall be able to control all the Output functions (Output 1~7) of X8 remotely.

2. Button III and Button IV can be used for emergency or service request purpose such as sending SMS messages by press the button.